
Personalizing Your Endpoint

This chapter describes features you can use to personalize your endpoint.

Adjusting the Viewing Angle

You can tilt the endpoint stand for a better view of the buttons.

To adjust the viewing angle:

1. Position the bottom of the endpoint base on a flat surface.
2. Tilt the endpoint to the desired angle.
3. Place the “feet” of the support mechanism in the holes on the base to secure the position of the endpoint.


 
Changing Volume Levels

You can change the following volume levels:

- Ringer (alerting tone)
- Handset
- Headset
- Background music
- External speaker

You must be using the feature to change the volume level. For example, if you want to change handset volume level, you must be using the handset. However, you can adjust the ringer (alerting tone) volume level when the endpoint is idle.




To change a volume level:

1. While using the feature, press  (Up) to increase the volume, or press  (Down) to decrease the volume.
2. Press the center of the button to save the setting.

Changing the Ring Tone

You can select one of nine different ring tones.

To change the ring tone:

1. With the handset on-hook, dial **398**.
2. Do one of the following to listen to (or turn off) ring tones:
 - Press **0** to turn the ringer off.
 - Press  (Up) or  (Down) or **1 to 9** to listen to ring tones.
3. Press  (Speaker), **#**, or lift and replace the handset to select the ring tone.